

DETAIL LEGEND:


- ① FX LUMINAIRE EX TRANSFORMER. MOUNT TO WALL WITH STAINLESS STEEL SCREWS.
- ② GFI PROTECTED 120V POWER WITH WATERPROOF OUTLET COVER
- ③ 4 X 4 [9 CM X 9 CM] REDWOOD POST MOUNTED IN A CONCRETE FOOTING. PROVIDE 1/2" [13 MM] CHAMFER AT TOP OF POST.
- ④ INSTALL LOW VOLTAGE CABLES INSIDE 1.5" [4 CM] DIA. GRAY PVC CONDUIT UNTIL CABLE IS 12" [30 CM] BELOW FINISHED GRADE.
- ⑤ FINISHED GRADE
- ⑥ CONCRETE FOOTING
- ⑦ TRANSFORMER POWER CABLE AND PLUG

NOTES:


- A. FX LUMINAIRE EX TRANSFORMER. SEE LIGHTING PLAN FOR WATTAGE, SIZE AND SWITCHING TYPE.
- B. ALL METAL PARTS MUST BE GROUNDED IN ACCORDANCE TO NEC GUIDELINES.
- C. BOTTOM OF TRANSFORMER CABINET TO BE A MINIMUM OF 12" [30 CM] ABOVE FINISHED GRADE.
- D. MOUNT BEHIND PLANT MATERIAL OR BOULDERS TO OBSCURE A DIRECT VIEW OF THE TRANSFORMER. LOCATE AWAY FROM SPRAY OF IRRIGATION HEADS.
- E. ALWAYS REFER TO FX PRODUCT INSTALLATION NOTES PRIOR TO INSTALLATION.

FX LUMINAIRE

1940 Diamond Street
San Marcos, CA 92078
Main: 760-744-5240
Technical Support: 760-591-7383
www.fx.com

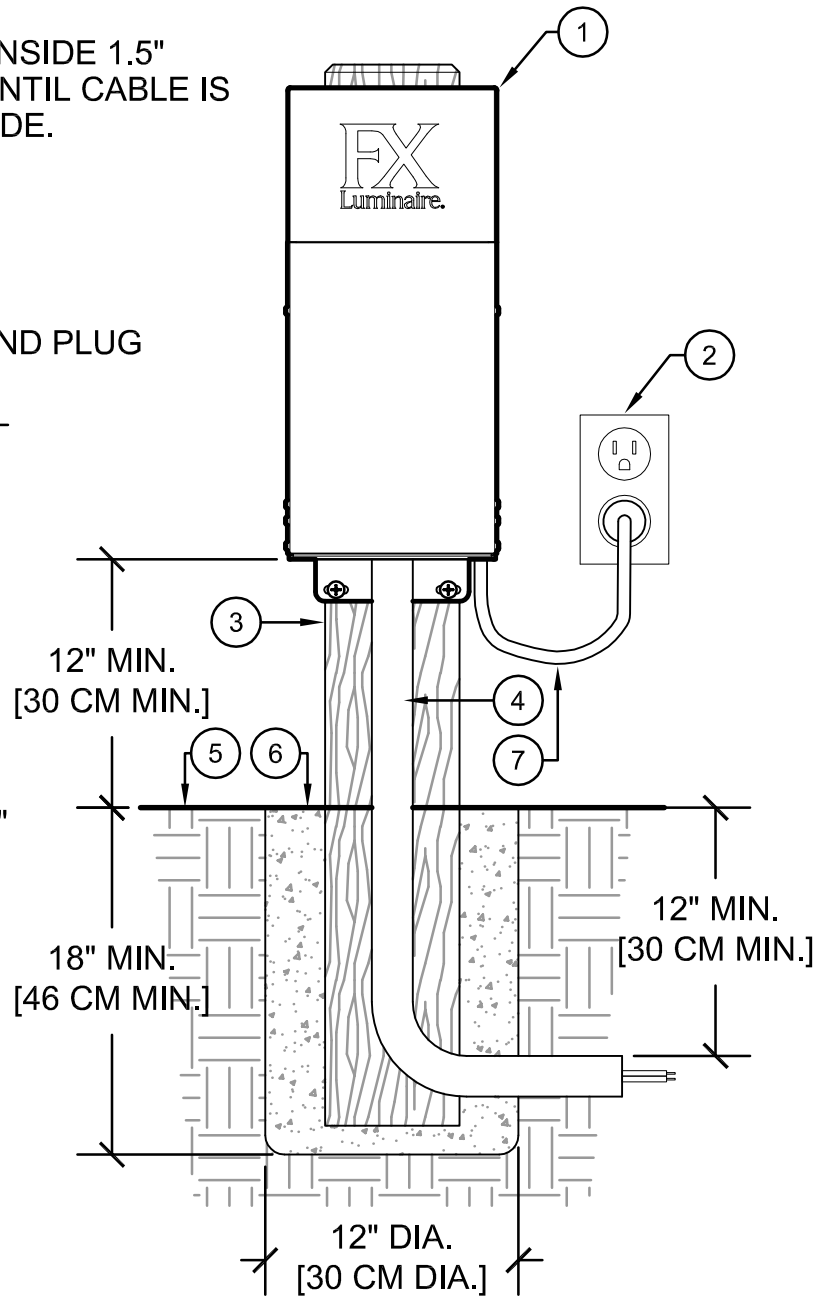

EX MOUNTING BRACKET POST MOUNT

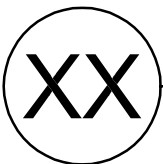

FXLuminaire.

NOT TO SCALE